


**Make It Easy**

## **Victorian Street Lamp**



## VICTORIAN STREET LAMP

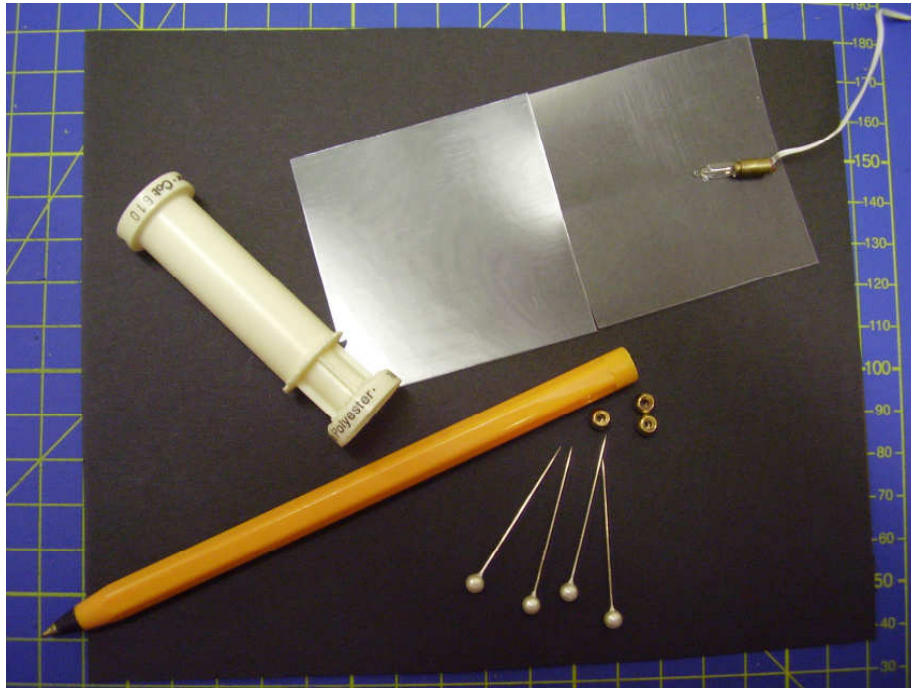

### Things you'll need:


Empty Cotton Bobbin ( Guttermans )  
Biro pen ( ink & nib removed)  
Piece of black card, approx 15cm x 15cm  
Piece of acetate, approx 7cm x 15cm  
1 x cocktail stick  
3 x small gold bead  
4 x knob pins  
Candle bulb & length of 12v cable

---

Cutting board  
Glue  
Small paint brush  
Humbrol paint black  
Sandpaper  
Craft scissors or knife


Mini Drill  
Pair of pliers

# Victorian Street Lamp Template

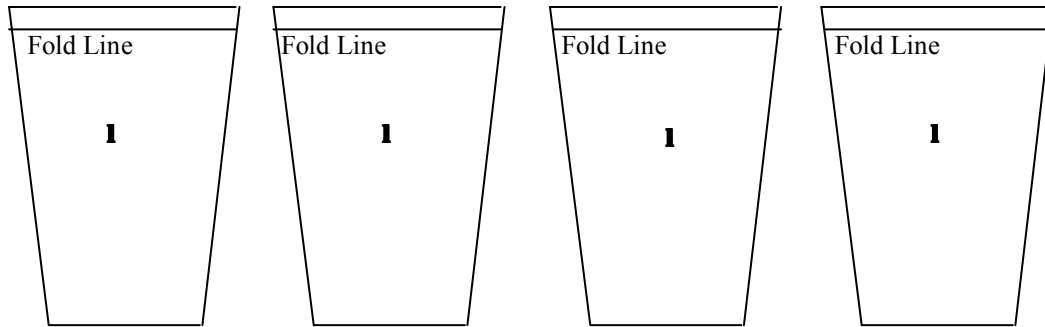


## KEY:

- 1 = ACETATE, LAMP GLASS
- 2 = BLACK CARD, BASE OF LAMP GLASS
- 3 = BLACK CARD, LAMP HOOD
- 4 = BLACK CARD, CORNERS FOR GLASS

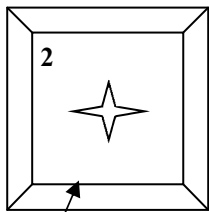


LIGHTLY SCORE .5CM FROM EDGE TO MAKE EASIER TO FOLD

CUT INTO CORNERS TO ALLOW CARD EDGES TO FOLD INWARDS

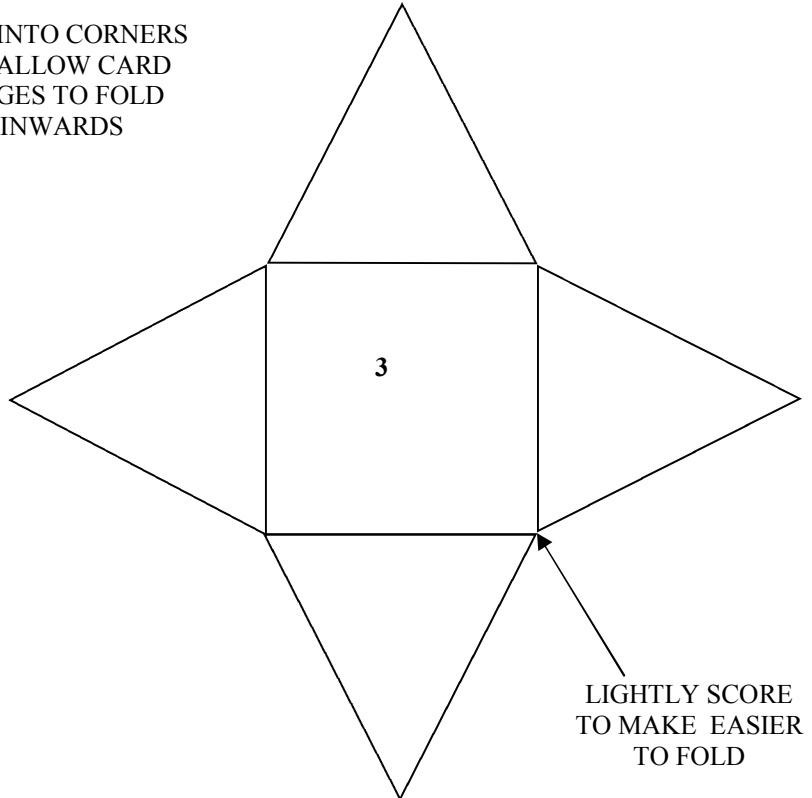

LIGHTLY SCORE & FOLD IN HALF LENGTH WAYS

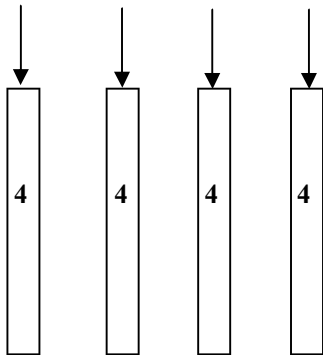

LIGHTLY SCORE TO MAKE EASIER TO FOLD

# VICTORIAN STREET LAMP ASSEMBLY INSTRUCTIONS

*Refer to the key on the template for numbered pieces.*

**Step 1.** Separate the cotton bobbin and lightly sand the scalloped edge on the top of the main bobbin.

Place the smaller bobbin piece over the top of the scalloped edge and glue in place. Using a sharp knife cut a small piece of the base away to allow the light cable to sit in.

**Step 2.** About 1.5cm from the top of the pen drill through one side to the other making a hole big enough to pass a cocktail stick through.

Centralise the stick and glue a bead on either end. Insert the biro pen casing into the top of the bobbin and glue in place.

**Step 3.** Fold (2) as shown, mark out the centre point and cut a cross big enough to pass the bulb through. Glue the acetate (1) narrow edge to the inner of the fold. Leave to dry.

**Step 4.** Glue and fold the edges (3) as shown to form the hood. Trim the points off the knob pins with pliers and attach along the glued edges as shown. Glue a bead onto the top of the hood. Leave the hood to dry and then apply a coat of paint.




**Step 5.** Fold the top edges of the acetate inwards, fold and glue (4) to the corner edges and glue the hood in place as shown.

**Step 6.** Position the bulb in the lamp and thread the cable down the post before gluing the lamp top to the post.

If necessary give the whole lamp another coat of paint to finish.



Step 1 and 2

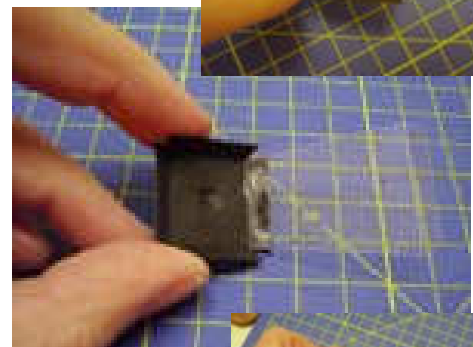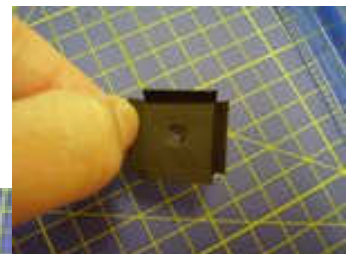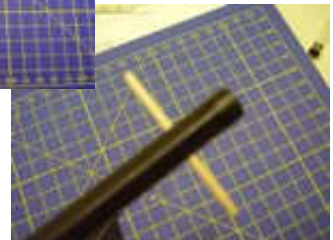

Step 3 and 4



Step 5

